

General

Application



F300 749

PVRE, PVRET and Prof joysticks from Sauer-Danfoss are generally used together with PVGs and PVEs, but can be used in any application. A complete range of joysticks from the simple PVRE handle with X-Y functions to the Prof 1 ergonomic handle with rollers and pushbuttons are available.

Mechanical Design

All handle variants share the same mechanical base to which the electronics are mounted. The mounting flange of the joystick is an integrated part of the mechanical base, which also contains a linkage that transfers handle movement to the electronics. The linkage also includes neutral positioning springs.

The neutral positioning springs are designed to ensure a smooth return of the handle into neutral position. The maximum spring force is optimised to be just strong enough to keep the handle in position, even during operation in rough terrain, without interfering with the operation of the joystick or impairing it's ergonomic characteristics.

Spring force	8-10 N
Spring force	0 10 10



General

Main Function Module

(Prop1 and Prop2)


The primary functions of the joystick are defined as its X and Y directions.

Main functions are potentiometers with integrated direction switches.

Each function has a working angle of $\pm 18^{\circ}$.


Signal range	Neutral signal		
25% – 75%	50%		
of supply voltage			

Note: When moving the handle diagonally the maximum signal range is not available.

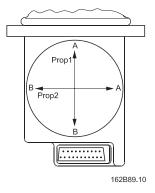

Connector

All joysticks come with a common **25 pin male SUB-D connector** with M3 screws. (MIL - DTL - 24308)





General


Direction Switches

Proportional modules have integrated direction switches. One switch is activated when the module is moved in the A direction, the other is activated when the module is moved in the B direction.

The direction switches are used to activate the neutral position switch, and with some electronic modules the direction switch outputs are available in the connector. (See details about electronics.)

There is a dead band in the joystick of approximately 1.5° before the direction switches are activated.

Note: The direction switches are independent from the signal voltage

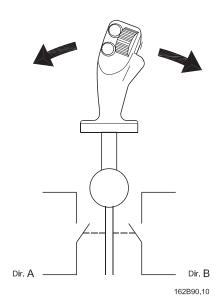

Neutral Position Switch

The neutral position switch can supply up to 3 PVEs or other devices (see electrical details), and functions as both a power save and a safety switch.

The switch is only activated when one or more of the proportional modules are activated.

The operation of the neutral position switch is dependant on signals from the direction switches.


Sauer-Danfoss recommends that the neutral position switch be used to the greatest possible extent.

Note: When using the neutral position switch all three U_{DC} wires as well as all three Neutral Switch wires **must** be connected.

Cables

For compatibility with different applications, a selection of mating cables are available:

Code no. 162B	Length mm [in]	Plug type	Туре
6013	4000 [157] Leads		Vertical SUB-D
6014	4000 [157] Leads		Horizontal Sub-D
6015	500 [19]	Clipper	-
6016	230 [9]	TrimTrio	-
6017	230 [9]	Tabs	PVRE compatibility

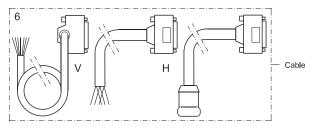

162B93.10 .10



Prof Joysticks


Prof Joysticks

The Prof family of joysticks is built around a series of modules that can be combined in various ways to create the joystick that best fits the application.

Each joystick has a base module with proportional functions (X & Y); a colour band for decoration and identity, a handle, and depending on handle selection, a number of pushbuttons and/or proportional functions.

Handle / Top functions

To provide optimum user comfort, a selection of handles is available. Each handle offers a choice of push buttons and / or proportional functions positioned for ease of use and comfort.

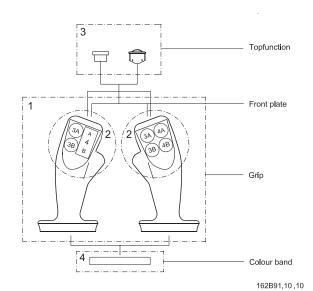

6




Prof Joysticks

Prof Joysticks


Base module

A number of electronic modules provide various performance levels to cater for different needs in different applications.

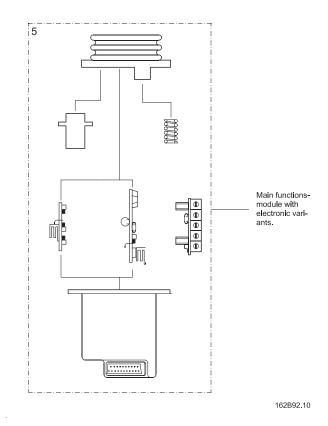

Cable

For easy integration into existing applications cables with different connectors are available as accessories, see page 5.

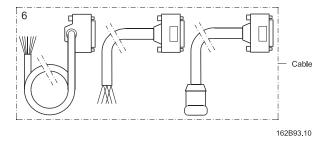



Prof 1

Prof 1

A professional handle for intensive operation; with a forward-leaning, curved, ergonomic shape. The leather-like grained surface allows the palm of the hand to breathe during operation.


The Prof 1 handle can be fitted with up to seven push buttons, or up to two proportional functions with up to five push buttons.


For location and combination of function modules see the overview.

Color Band

A choice of colors is available for the band at the base of the handle.

Colors	
Yellow	
Black	
Red	

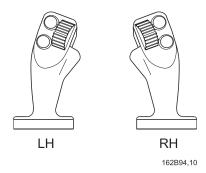

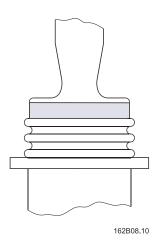

Proportional Modules

The roller function module is a spring centred potentiometer with integrated direction switches.

Working angle: ±42°

Direction switch angle: 3.5 ±2°


Signal range	Neutral signal		
25% – 75%	50%		
of supply voltage			

Push Buttons

The handle can be fitted with up to seven independent On/Off functions.

The buttons are protected against shocks and unintentional activation by a high collar.

Colors
Yellow
Black
Red
Grey

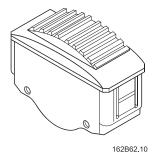






Prof 1

Location and Orientation of Modules

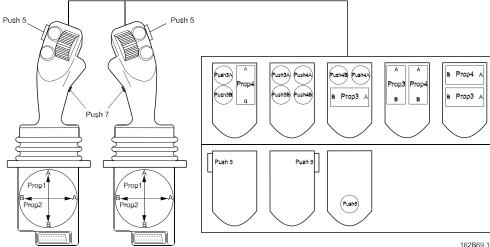

162B69.11

Electronic Modules

The electronic modules are available with four different performance levels: Basic, Standard, Extended, and CAN-enabled.

Basic

The Basic level module is a connection platform that contains no electronics. This version offers raw signals from function modules, proportional modules, and push buttons.

The Basic level module contains no kind of protection, amplification, neutral switches, relays, or filtering and meets no legal specifications. The proportional functions in the basic

module are configured like this:



The value of P is 5 K Ω , R1 and R2 are 1.125 K Ω (See technical data for tolerances). This configuration ensures that the output signal will be at least 25%-75% of the supply voltage.

Note: Because of the output impedance of the sensors, it is recommended to use an amplifier if the application draws more than 15 μ A.



Prof 1

Electronic Modules


Standard


The Standard level electronic module provides amplifiers, inverting and signal relays on all proportional outputs, and an electronic switch on all On/Off outputs.

The signal relays are controlled by the power supply in such a way that a power failure will disconnect the output. (This will automatically send a Sauer-Danfoss proportional valve to neutral position)

When used together with a Sauer-Danfoss proportional valve signal inversion causes the joystick to move the spool in the direction opposite to the default. This is equivalent to swapping the hoses on the valve outlets.

Note: The directional switches are not affected by the signal inversion.

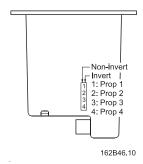

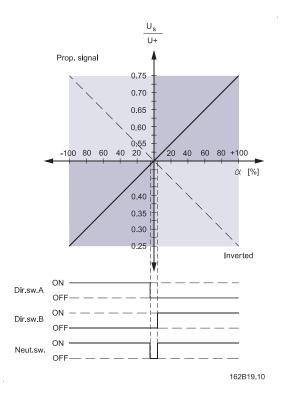

Factory setting: Non-inverted




Prof 1

Electronic Modules

Extended

The Extended level electronic module has the same configuration as the Standard level module. Additionally it has adjustable proportional functions. The Extended level module offers the option of individual signal adaptation (flow adjustment) and common dead-band compensation.

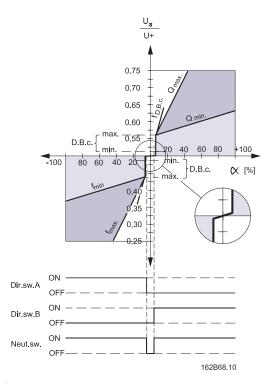

The dead band compensation (D.B.c.) ensures that the dead band of the valve is reduced to a minimum movement of the grip.

The dead band compensation is only active outside the neutral range, which ensures normal amplification within the neutral position range.

The dead band compensation is set for all four proportional functions on one potentiometer.

For each proportional function there are two integrated potentiometers that independently control the gain for the A and B directions of the signal output without limiting the movement range of the handle (adjustable flow range).


The gain of each function can be adjusted from 0.25 to 2.00. This has no effect within the D.B.c. range.



Prof 1

Electronic Modules

Location of potentiometers for adjusting D.B.c and gain:

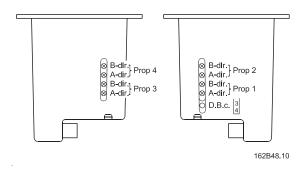

Factory setting @ 12 V				
Dead band compensation	0.42 V			
Signal gain	0.86			

CAN-enabled

There is a CAN-enabled electronic module available for the Prof family of joysticks. The module provides a standard CANOpen interface. For further information read Sauer-Danfoss Technote on CAN bus components and see our webpage: http://www.sauer-danfoss.com




Joystick Prof 1, PVRE and PVRET SAUER Joystick Prof 1, PVRE and Technical Information

Prof 1

Connections

- Basic

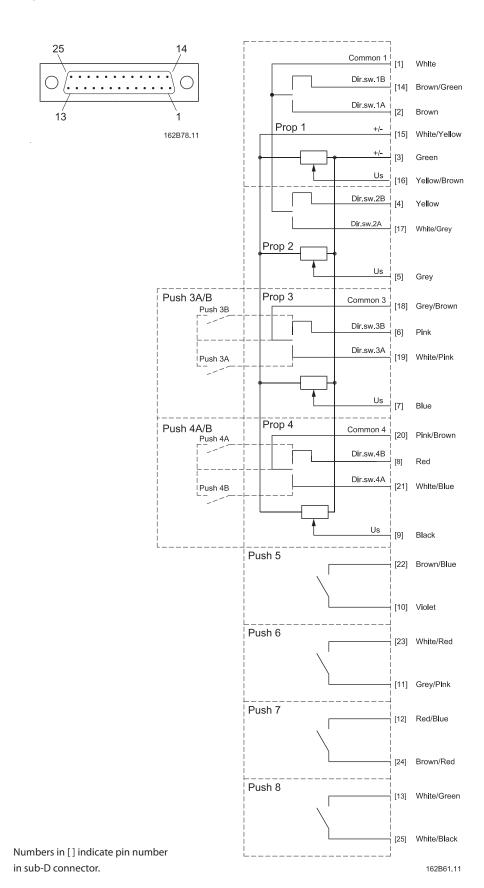





Prof 1



{N} (13) Violet Green (18) White/Yellow - Extended





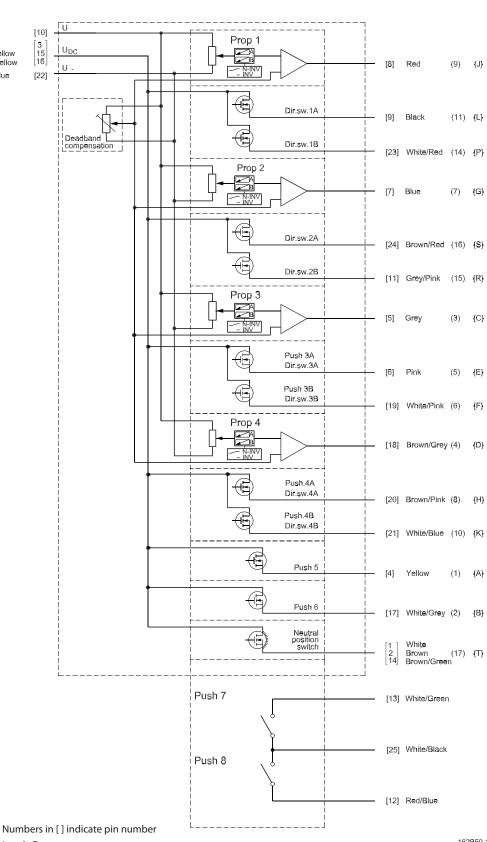

in sub-D connector.

162B59.12



Joystick Prof 1, PVRE and PVRET

Prof 1

Technical Data

All

Enclosure	Below flange	IP 21
Enclosure	Above flange	IP 50
Ambient temperature		-30 - +60° [-22 - +140°F]
Max. force on handle		1000 N static

Basic

Supply voltages		U+	≤30 V	
Proportional functions	R1	Р	5 KΩ ±50%	
	₹P∏ ▼ ∏ R2	R1 & R2	P × 0.225 ±1%	
Max signal current			15 μA (1 mA peak)	
Max direction switch load for all proportional functions			30 V _{DC} / 2mA	
Max push button load			30 V _{DC} / 50mA	

Note: There are no electronics built in to the Basic level module.

Standard and Extended

Supply voltages		U_{DC},U_{+}	10-30 V	
		Max ripple	5%	
Current consumption			≈150 mA	
Signal voltage II	U _s	$Min \rightarrow Max$	0.25 → 0.75	
Signal voltage U _s	U_+	Neutral position	0.50	
Signal load in neutral position		Load type	PVE	Other
Signal load in neutral position		Load impedance	>6 kΩ	>15 kΩ
Signal current at max movement		@ U _{DC} = 12 V	$\begin{array}{c} \text{U}_{\text{S}} 0.5 \times \text{U}_{+} \\ \text{6 k}\Omega \\ \pm 0.6 \text{mA} \end{array}$	U_s 15 k Ω 0.2 \rightarrow 0.6 mA
		@ U _{DC} = 24 V	± 1.2 mA	$0.4 \rightarrow 1.2 \text{ mA}$
Signal current in neutral position		$@ U_{DC} = 12 V$	± 0 mA	0.4 mA
		$@ U_{DC} = 24 V$	± 0 mA	0.8 mA
		Non inverted	Output signal = U _s	
Inverter		Inverted	Output signal = $-1 \times (U_s - 0.5 \times U_+) + 0.5 \times U_+$	
Push buttons and directions switches for all proportional functions		Max load	0.6 A	
Push 7 & Push 8		Max load	oad 30 V _{DC} / 50 mA	
Neutral position switch		Max load	3 A	

Extended only


Signal regulation U _s	U _s	Min (50%) 0.37 → 0.63 at 100% movement		
	U_+	Max (200%)	$0.25 \rightarrow 0.75$ at 50% movement	
Dood hand same neartism	U _s	Min	0.00	
Dead band compensation	$U_{\scriptscriptstyle{+}}$	Max	0.06	



Joystick Prof 1, PVRE and PVRET

Prof 1

Dimensions

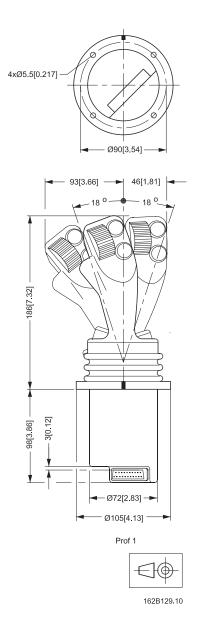




Prof 1

Examples of Use

Signal leads must not also function as supply leads unless the distance between PVE and terminal board is less than 3 m [120 in] and the lead cross-

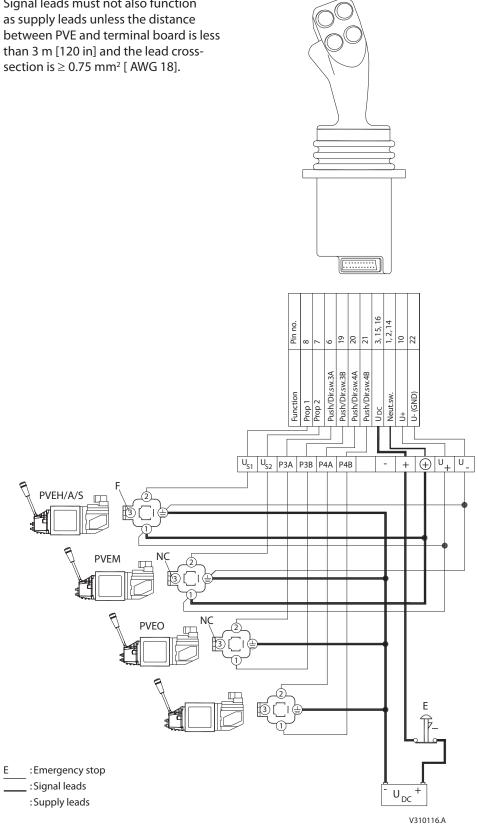




SAUER Joystick Prof 1, PVRE at Technical Information Joystick Prof 1, PVRE and PVRET

Prof 1

Examples of Use

Basic version used with controller

When using the Basic level module with a controller, it is recommend to use a filter similar to the one in the figure below to ensure a symmetric and limited load on the proportional sensors.

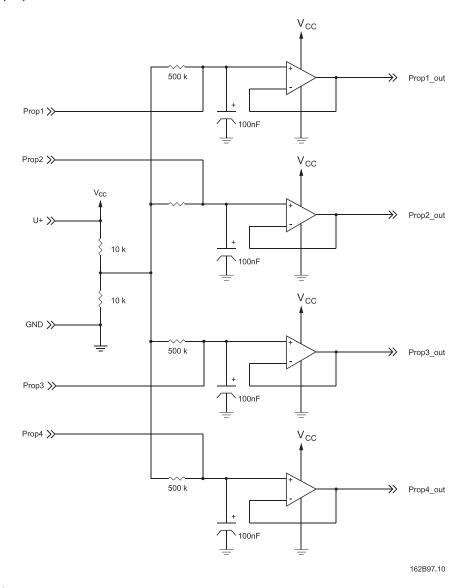

Note: There are no electronics built in to the Basic level module



Joystick Prof 1, PVRE as Technical Information Joystick Prof 1, PVRE and PVRET

Prof 1

Standard Programme

The joystick variants offer a wide range of different combination possibilities. This may result in several code numbers with identical functions (such as location of push button and choice of color).

Based on experience we have therefore put together a standard program. The standard programme of joysticks is available in the following variants:

- 4-way mechanical
- Yellow push buttons with flat collar
- Red color bands
- Standard electronics (excl. basic and extended with flow and dead band compensation).

No. of prop	No. of ON/OFF	Code numbers Left hand			Code numbers Right hand
2	0	162F1116			162F1100
2	1	162F1117	U	Ũ	162F1101
2	2	162F1118	8	8	162F1102
2	3	162F1119	3	89	162F1103
2	4	162F1120	83	88	162F1104
2	5	162F1121	88	88	162F1105
2	6	162F1122	8	8	162F1106
3	0	162F1134	U	U	162F1132
3	1	162F1135	9	U	162F1133
3	2	162F1123	80	8	162F1107
3	3	162F1124	8	8	162F1108
3	4	162F1125	8	8	162F1109
3	2	162F1126	e	ë	162F1110
3	3	162F1127	9	F	162F1111
3	4	162F1128	8	8	162F1112
4	0	162F1129	9	U	162F1113
4	1	162F1130	U	P	162F1114
4	2	162F1131	U		162F1115



Prof 1

Selection Overview

3. Top functions

		Position 3A, 3B, 4A, 4B, 5, 6, 7	Position 3, 4
Code no. 162B		Push button	Proportional roller
Color	Black	3000	3100
	Red	3002	-
	Yellow	3004	-
	Grey	3008	-

1. Grip

Code no. 162B		••	Description
Black	Grey		
1050	1000	Right hand	Without On/Off push button in the side
	1001	Right hand	With On/Off push button in the side (Push 5)
	1004	Right hand	With dead mans button (Push 7)
	1005	Right hand	With On/Off push button in the side (Push 5) and dead mans button (Push 7)
1150	1100	Left hand	Without On/Off push button in the side
	1101	Left hand	With On/Off push button in the side (Push 5)
	1104	Left hand	With dead mans button (Push 7)
	1105	Left hand	With On/Off push button in the side (Push 5) and dead mans button (Push 7)


4. Color band

Code no. 162B	Color
4002	Red
4003	Yellow
4000	Black

Topfunction Front plate Grip Grip Grip Main functionsmodule with electronic variants.

6. Cable


Code no. 162B	Length [mm]	Plug type	Note
6013	4000	Leads	Vertical
6014	4000	Leads	Horizontal
6015	500	Clipper	-
6016	230	TrimTrio	-
6017	230	Tabs	PVRE compatibility

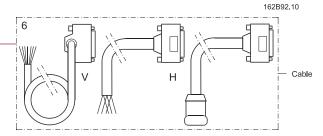

162B93.10 .10

Selection Overview

2. Front plates

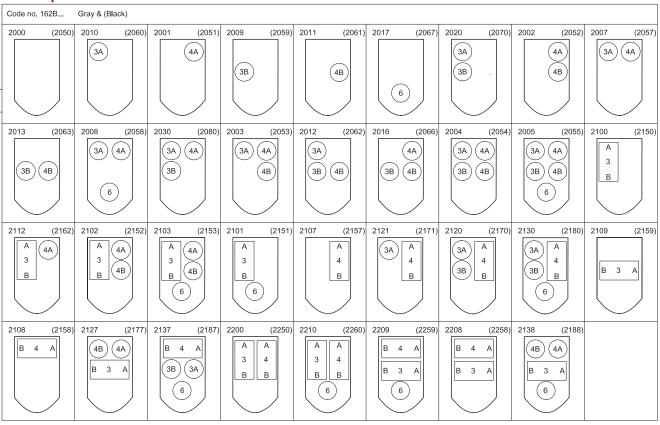

162B56.11

5. Electronics

Code no. 162B	Туре	Description
5000	Basic	2 - 4 proportional functions, 0 - 7 ON / OFF functions
5002	Standard	2 - 4 proportional functions with direction switch and neutral switch 0 - 7 ON / OFF functions
5004	Extended	2 - 4 proportional functions with direction switch and neutral switch Electronic flow adjustment and dead band compensation on one or more prop functions 0 - 7 ON / OFF functions
5100	CAN enabled	See CAN Tech-Note



SAUER Joystick Prof 1, PVRE and PVRET Technical Information **Prof Joysticks**

Standard Programme Details

This table shows a breakdown of contents of the standard programme joysticks.

Code numbers	Front plate	Grip code	Electronic
162F1100	162B2000	162B1000	162B5002
12F1101	162B2010	162B1000	162B5002
12F1102	162B2020	162B1000	162B5002
162F1103	162B2030	162B1000	162B5002
162F1104	162B2004	162B1000	162B5002
162F1105	162B2005	162B1000	162B5002
162F1106	162B2005	162B1001	162B5002
162F1107	162B2102	162B1000	162B5002
162F1108	162B2103	162B1000	162B5002
162F1109	162B2103	162B1001	162B5002
162F1110	162B2127	162B1000	162B5002
162F1111	162B2127	162B1001	162B5002
162F1112	162B2137	162B1001	162B5002
162F1113	162B2200	162B1000	162B5002
162F1114	162B2200	162B1001	162B5002
162F1115	162B2210	162B1001	162B5002
162F1116	162B2000	162B1100	162B5002
162F1117	162B2001	162B1100	162B5002
162F1118	162B2002	162B1100	162B5002
162F1119	162B2003	162B1100	162B5002
162F1120	162B2004	162B1100	162B5002
162F1121	162B2005	162B1100	162B5002
162F1122	162B2005	162B1101	162B5002
162F1123	162B2120	162B1100	162B5002
162F1124	162B2130	162B1100	162B5002
162F1125	162B2130	162B1101	162B5002
162F1126	162B2127	162B1100	162B5002
162F1127	162B2127	162B1101	162B5002
162F1128	162B2137	162B1101	162B5002
162F1129	162B2200	162B1100	162B5002
162F1130	162B2200	162B1101	162B5002
162F1131	162B2210	162B1101	162B5002
162F1132	162B2100	162B1000	162B5002
162F1133	162B2112	162B1000	162B5002
162F1134	162B2107	162B1100	162B5002
162F1135	162B2121	162B1100	162B5002

Prof 1 Joystick Specification

Prof 1 Joystick SpecificationCustomer specification

Code no:			
Customer:			
Application:			
Subsidiary/Dealer:			
1. Grip			
2. Front plate			
3. Top functions	Position	Position	
	(push button colour)	(roller)	
	3A:	3:	
	3B:	· 5.	
	4A:	4:	
	4B:	4:	
	5:		
	6:		
	7: ¹⁾		
4. Colour band			
5. Main function module	Set-up		
	Inverted ²⁾	Flow reduction and	
	(✓ = inverted)	dead-band compensation 3)	
		(✓ = ON)	
	Prop. 1	Prop. 1 □	
	Prop. 2	Prop. 2 \square	
	Prop. 3	Prop. 3 □	
	Prop. 4 □	Prop. 4 □	
6. Cable		,	
Compiled by:	Checked by:		
Date:	Date:		

- 1) Only for deadman button
- 2) Only for standard and extended level options. Factory setting is "non-inverted" if nothing else is mentioned
- 3) Only for extended level option. Factory setting is "on" if nothing else is mentioned.